


HOW TO ZERO TPS YOUR VORTEX ECUs

STEP 1

Hold the kill switch and push the start button for 2-3 seconds.


NOTE : If your motorbike doesn't have a start button give your kick starter 1-2 strokes.

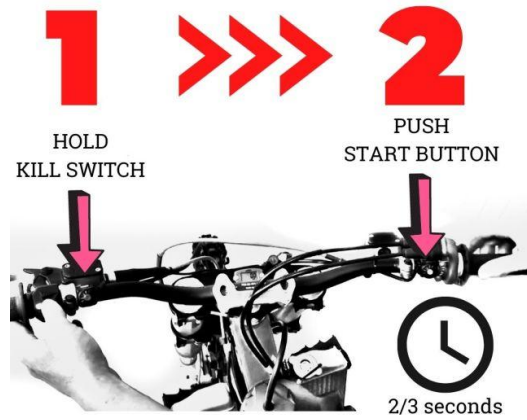

STEP 2

While keeping the throttle fully twisted push the start button for 2-3 seconds.

NOTE : If your motorbike doesn't have a start button give your kick starter 1-2 strokes.

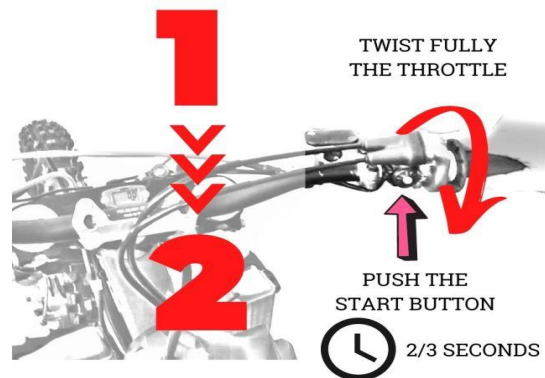

STEP 3

The calibration process is now complete.



BIKE IS READY!